

Volume Control Knob

1. Volume up or down
2. Single press to play/pause
3. Long press to switch on/off/reset

Bass Control Knob

1. Bass up or down
2. Long press to connect or Disconnect guest seat

Vibration Control Knob

- Click to switch mode
(Default Bluetooth)
- ① AUX input mode
 - ② Bluetooth mode
 - ③ USB input mode

Press and hold for three seconds
to pair/unpair Bluetooth



Next track

Previous track

Type-C 18W Fast Charging port

1. Long press to turn on/off the light
2. Press through 13 different dynamic light functions

Type-C 5W Charging port
+ Data transfer